


**NOTE: Do NOT run open airbox on stage 1 tuning.
Do NOT run stage 2 tuning without open airbox.**

1330cc

Using a 1.5 inch hole saw. Drill from back side.

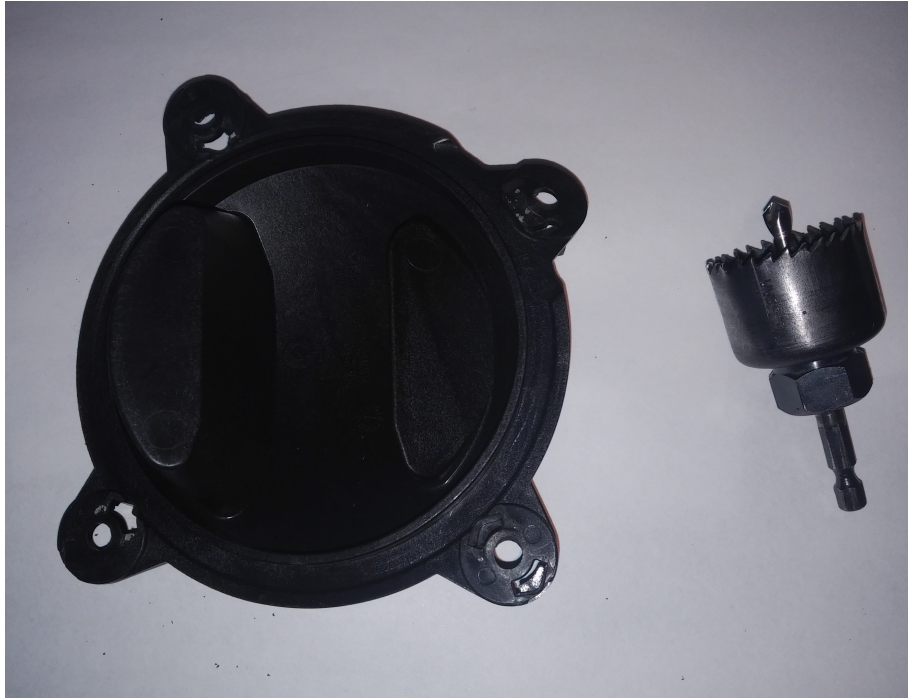

There is only 2 spots the hole saw will fit. We want a smooth hole without touching other parts of air filter lid. Since the centre bit cant be centred properly to start the hole at correct angle. Remove centre drill bit and insert saw to find.



Drill a bigger hole for the centre drill bit to freely go through. Then can drill holes from backside out to front.





998 cc

Remove complete resonance chamber.

